






Pine Raised Trough Planter Assembly

	A - Side Sections x2	<p>Tools Required Cross</p> <ul style="list-style-type: none">● Head Screwdriver● Rubber/Soft Mallet● 3.2mm Drill Bit● Cordless Drill <p>Please Note</p> <ul style="list-style-type: none">● Number of 'Feet Parts' will vary depending on size of planter● Before Assembly, it may be necessary to pre-drill some of the holes for easier installation
	B - End Sections x2	
	C - Feet	
	D - Base x1	
	Fixing Screws	

Pine Raised Trough Planter Assembly

Step 1: Place 1st side section into end section, you may need to tap it in place with a mallet



Step 2: Locate the pre-drilled holes on both sections and fix in place with supplied screws




Pine Raised Trough Planter Assembly

Step 3: Place 2nd end section onto 1st side section and attach with screws as in step 2.



Step 4: Now do the same with the final side section, you may need to tap it into place gently before fixing with screws.

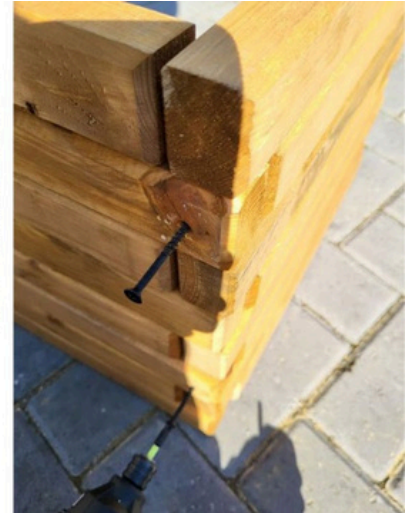

Pine Raised Trough Planter Assembly

Step 5: Turn the planter upside down and attach the feet using 2 screws per foot.



Step 6: Turn the planter over again so that it's upright and place the base section inside.



Pine Raised Trough Planter Assembly

Your Planter is now complete!

- We recommend using a liner inside the planter before adding your compost and plants, this will help to prolong its life and protect it from rot.
- You can also use a wood preservative of your choice, or paint it in your preferred colour.

